

AIR SPA

USER MANUAL



AIR SPA USER GUIDE – 4 BUTTON FUNCTION

Your new Air Spa and Light system is easy to use, but we ask that you take the time to read these instructions carefully prior to use to ensure you get the best out of it.

The buttons are perfectly safe to use with wet hands.

SPA OPERATION

- Press the Spa symbol (bubble image) to turn the system on – see **FIG. 1**. The plus and minus symbols will increase or decrease the speed and power of the blower.
- Press the Spa symbol a second time while it is running and the blower will go into variation mode, where it will increase and decrease in speed automatically.
- The third press will turn the system off.

Once started, the systems will run for 20 mins and turn off automatically. To continue operating, just press the button again.

FIG. 1



LIGHT OPERATION

- You can use your light function at any time during your spa experience. Press the light symbol to turn the light on – see **FIG. 1**.
- The led lamp will slowly cycle through a spectrum auto-rotating colours. Press again and the light will flash slowly and continuously until stopped.
- The third press of the button will turn the system off.

CARE

- Clean the control panel, light and jets as you would your bath, using a soft cloth and mild non-abrasive cleaning solution.

TECHNICAL REQUIREMENTS

- Your system requires a 13amp IP65 Non-Switched fused spur connection, positioning and specification to be in accordance with the latest IEE regulations. Control Panel IP55 Rated.
- The LED on the button will flash once every 8 seconds, to confirm that there is power to the system.
- They Air and Light system will only work when the water level is high enough (above the sensor attached to the bath shell) when the system is ready for use, the LED will flash every 0.5 seconds.

AUTO-PURGE HYGIENE MANAGEMENT SYSTEM

- Once the system has finished running and is emptied, after 20 minutes it will turn on the blower automatically and blow out the residual water. It will run for 3 minutes continuously and then switch off.
- If the bath is used and filled above the water level for more than 30 secs, even if the air spa is not operated, the blow out function will be activated and operate as above.
- If a function is active, when the bath is empty (blow-out function) the LED will flash twice every second until the system blow-out occurs.