

# BRISTAN


## Installation Instructions & User Guide

Please leave these instructions  
with the end user

Product code: QST BAS C (D7)

### Specifications

#### Maximum Inlet Temperature


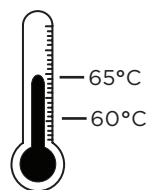


60-65°C Recommended

#### Dynamic Water Pressure


Min: 0.2 bar

Max: 5.0 bar

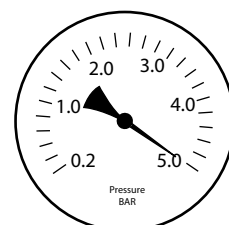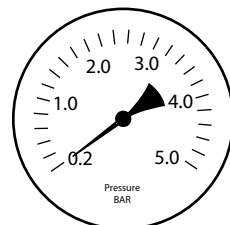


Maximum Static Pressure: 10.0 bar

#### Inlet Connections

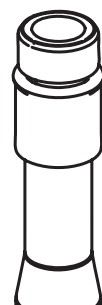 

M12x265mm  
Copper Tails

### Tools You'll Need

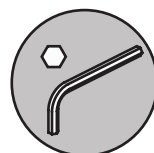

Hexagonal Keys



Adjustable Spanner

### Prior to Installation

All products manufactured and supplied by Bristan are safe provided they are installed, used correctly and receive regular maintenance in accordance with these instructions.

This product has been tested to the Water Regulations Advisory Scheme (WRAS) and satisfies the requirements of the Water Supply (Water Fittings) Regulations 1999 and current bylaws. For full Installation Requirements & Notes (IRN) please visit [www.wras.co.uk/directory](http://www.wras.co.uk/directory).


We recommend isolation valves to be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing these taps the water supply must be thoroughly flushed in order to remove any swarf, solder etc.



This product must not be modified in any way as this will invalidate the guarantee.

### Pack Contents


x1

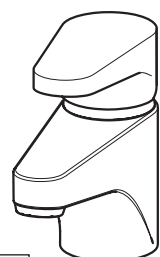


x1

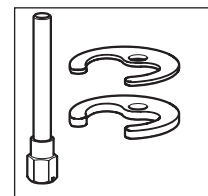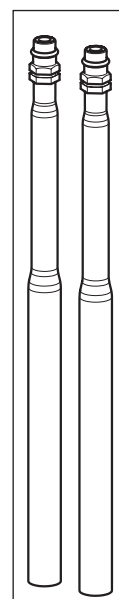 

x1

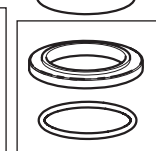

x1

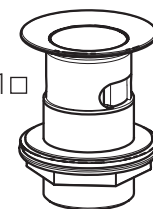

x1


### Spare Parts

To replace any spare parts  
for your tap, why not  
scan the QR Code or  
visit [www.bristan.com](http://www.bristan.com)  
and search for your product.



### Installation

1

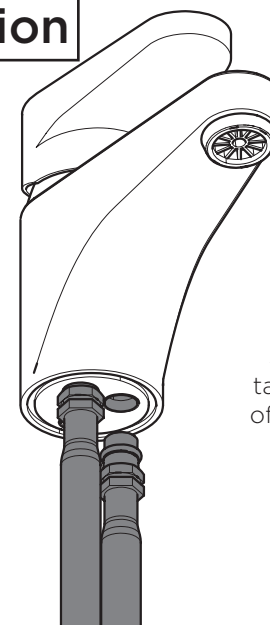


Screw the copper  
tails into the bottom  
of the mixer body by  
**hand only.**  
(DO NOT  
OVERTIGHTEN)


**TIP**  
Prefit mixer  
to the basin  
before  
fitting.

2

Place the plinth and  
the washer over the  
hole in the basin and  
feed the mixer body  
and tails through.

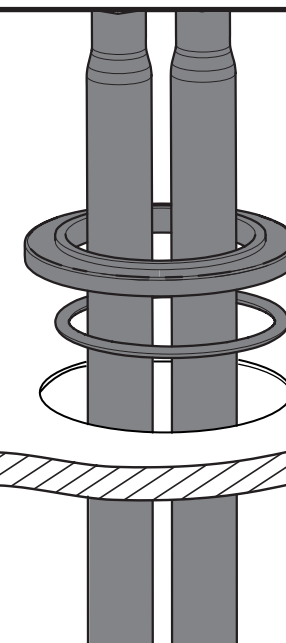

3

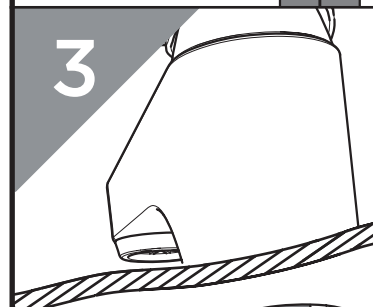


Secure to basin using  
fixing kit, connect the  
hot and cold water  
supplies to the tails.

**REMEMBER**  
Hot on the  
left, cold on  
the right!

4


Fit the waste  
above the basin  
with the top  
washer.

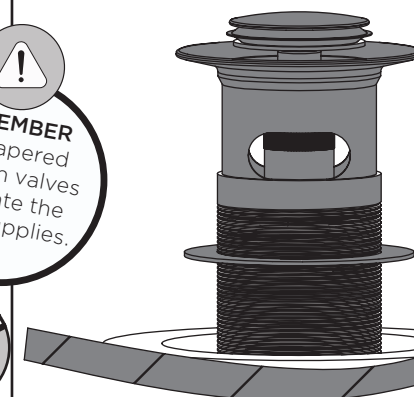

**REMEMBER**  
Use tapered  
isolation valves  
to isolate the  
water supplies.

**IMPORTANT**  
Turn on water  
supply for a few  
minutes and check  
all joints and  
connections for  
any leaks.

5

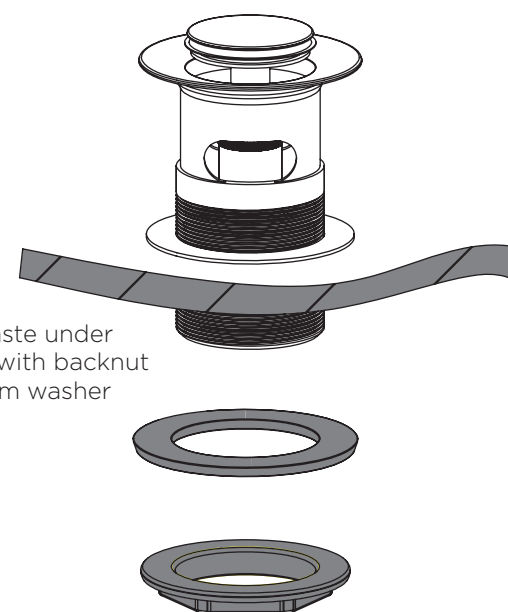


Secure waste under  
the basin with backnut  
and bottom washer


### Waste Operation



Push the centre  
down to close the  
waste. Push again  
to open and release  
contents of basin.

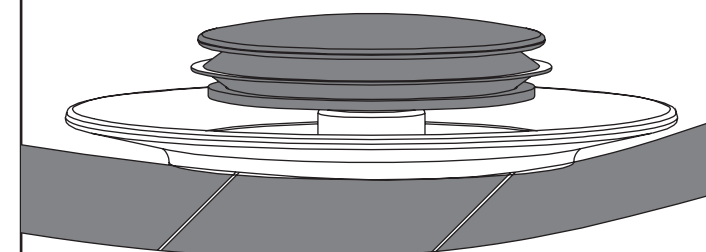

Operation

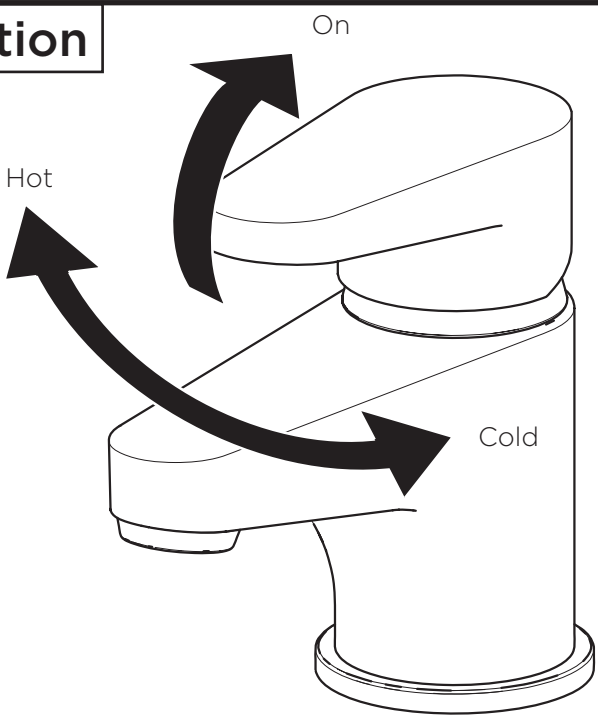

General Cleaning

Bristan products are made from premium materials, with hand polishing and electroplated finishes.

Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Some surfaces such as nickel and pewter may be affected by the dye found in some cloths, so it is also important to avoid hanging cloths on spouts.

Troubleshooting

Symptom	Cause	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Instantaneous water heater cycles on and off as flow rate or pressure is too low.	Increase water flow rate or pressure through system.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
Water dripping from taps	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
	If water continues to drip, possibly due to the ceramic disc valves	Remove valves and clean, refer to 'Maintenance' section before starting any maintenance.
Taps do not turn on	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.

Maintenance - Clean/Replace Outlet

1

Unscrew the flow straightener.

2

Place flow straightener parts in a suitable solution and soak until fully de-scaled.

3

Reverse the maintenance steps to replace the flow straightener.

Maintenance - Cartridge Cleaning

1

Remove handle cap and loosen the handle grub screw. Remove handle.

2

Remove shroud, retaining nut and cartridge.

3

Place cartridge in a suitable solution and soak until fully de-scaled.

4

Reverse the maintenance steps to replace the handle.

Notes

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit [www.bristan.com/register](http://www.bristan.com/register) to register your product via a computer.

For full guarantee terms and conditions visit [www.bristan.com/guarantees](http://www.bristan.com/guarantees).



We Know & We Care