


WALK IN CONFIGURATIONS


Once you have identified your space you can create your personalised showering solution; with our flexible modular glass panels, profiles and stabilising fixings the layout options are almost endless.

When choosing your configuration, we recommend you allow 500mm minimum entry space.

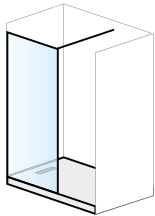


Recess

- 1 x Glass Panel
- 1 x Wall Profile
- 1 x Bracing Bar (Wall or Ceiling)

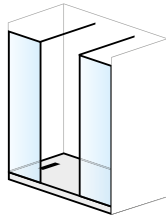


Recess with Double Panel

- 2 x Glass Panels
- 2 x Wall Profiles
- 2 x Bracing Bars (Wall or Ceiling)

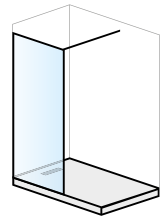


Open Ended

- 1 x Glass Panel
- 1 x Wall Profile
- 1 x Bracing Bar (Wall or Ceiling)

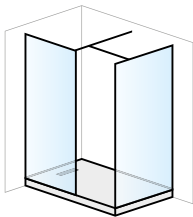


Corner with T Bracing Bar

- 2 x Glass Panels (up to 1000mm max.)
- 2 x Wall Profiles
- 1 x T Bracing Bar

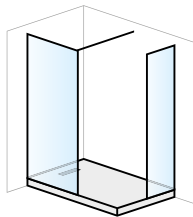


Corner

- 1 x Glass Panel
- 1 x Glass Panel (up to 500mm max.)
- 2 x Wall Profiles
- 1 x Bracing Bar (Wall or Ceiling)

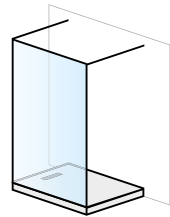


Walk Through

- 1 x Glass Panel
- 2 x Glass to Wall Bracing Bars

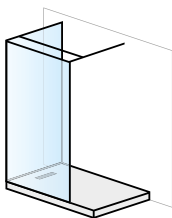

Glass Corner with T Bracing Bar

- 2 x Glass Panels (up to 1000mm max.)
- 1 x Wall Profile
- 1 x T Bracing Bar
- 1 x Glass to Glass Corner Seal

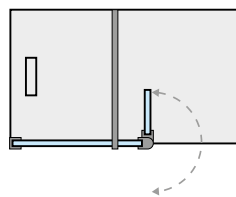

180° Hinged Deflector Panel

Available in 300mm, our hinged panel rotates through 180° for easier access. The colour matching hinges and clear seal give your walk in a seamless appearance.

We wouldn't recommend installing a deflector panel if you have chosen a glass to ceiling bracing bar.

- 1 x Glass Panel for Hinged Deflector
- 1 x Deflector Panel 180° Hinges (pair)

Additional Design Flexibility

The configurations shown are the most typical options; if you require something different please talk to your local bathroom specialist.

For further installation information or to find your local retailer visit burlingtonbathrooms.com