

## STANDARD TRAY PLINTH KIT INSTALLATION INSTRUCTIONS

Please read these instructions throughout before installing as incorrect fitting will invalidate the guarantee.  
If you are unsure about these instructions please contact Kudos Shower Products 01 539 564040.

THESE INSTRUCTIONS ARE TO BE LEFT WITH THE CONSUMER

### HEALTH & SAFETY WARNING





DUE TO THE WEIGHT & SIZE OF THE TRAY(S) A MINIMUM OF TWO PERSONS ARE REQUIRED TO MOVE AND INSTALL

### Important

Check appearance of all product - any defects must be reported to your retailer before assembly/installation. Claims for imperfections will only be accepted prior to assembly/installation.

Any claims made under the terms of the Lifetime Guarantee must be reported to your retailer within 21 days of the fault occurring.

### Rectangular Facia Product Descriptions & Codes

<p><b>Product Code: I68653</b> Decorative Acrylic Facia Cover 1200mm High Gloss Finish</p> 	<p><b>Product Code: I61491</b> Decorative Acrylic Facia Cover 1900mm High Gloss Finish</p> 
<p><b>Product Code: I63321</b> Decorative Acrylic Facia Cover 1200mm Matt SR Finish</p> 	<p><b>Product Code: I64758</b> Decorative Acrylic Facia Cover 1900mm Matt SR Finish</p> 


### Rectangular Tray - Base Board

1. Cut out a Base Board (not supplied) with a minimum of 18mm thick and needs to be a moisture resistant material.

**Recess:** width value of 'X' and depth value of 'Y' - 14mm.

**Corner:** width value of 'X' - 14mm and depth value of 'Y' - 14mm.  
As shown.

2. Cut a Hole (max 140mm) corresponding to the waste position on the tray. If fitting a connect2 tray cut only one hole to correspond to the waste hole to be used.


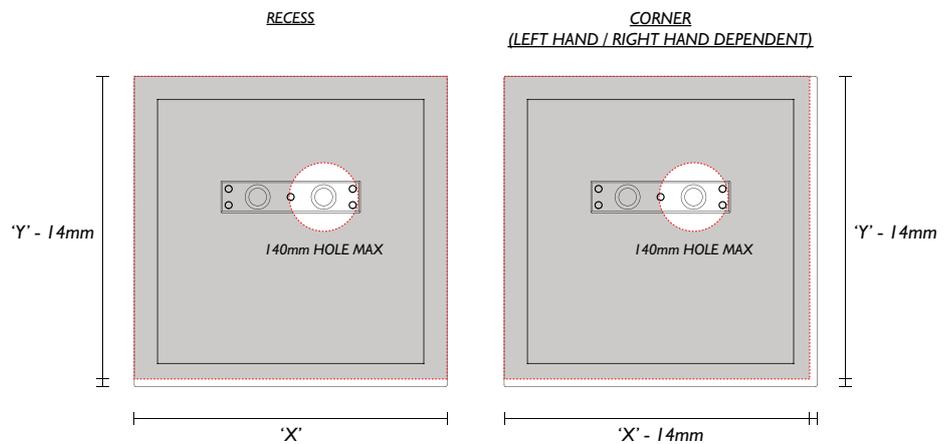


### Rectangular Tray - Front and Side Board

1. Cut out Front / Side Board (not supplied) 12mm thick and needs to be a moisture resistant material. Heights need to be the same as the underside of the tray.

**Recess:** Front board, width value of 'X'.


**Corner:** Front board width value of 'X' - 2mm.  
**Side board** width value of 'Y' - 14mm.  
As shown.

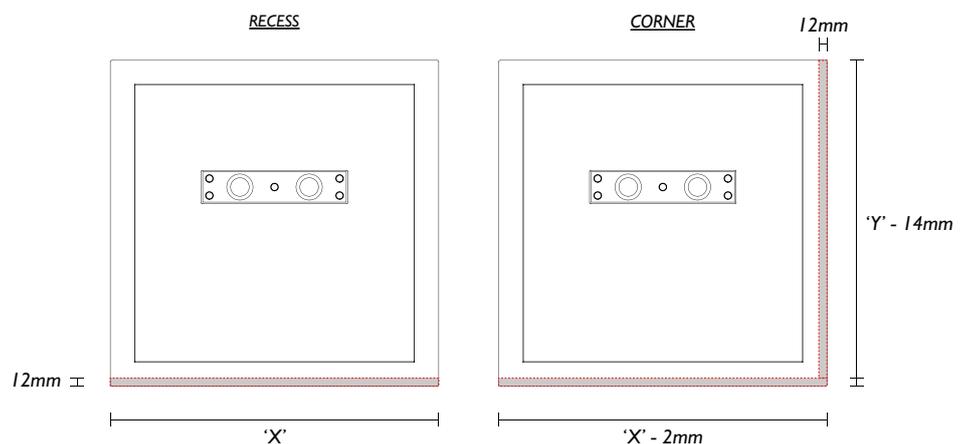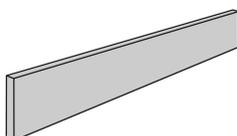

## Rectangular Tray Plinth Installation

1. Install using the diagram provided.
2. Screw Boards together using wood screw (not supplied).
3. When fitting bed the tray with sand and cement using 10mm notch spreader. Make sure it's level.
4. We recommend using spray repositional adhesive, or double sided tape when adding the Decorative panels to the front/ side boards.
5. Silicone around edges.
6. Leave for 24hrs.

*Optionally, to keep the front / side boards in position you can add brackets or blocks on the inside, see back page.*

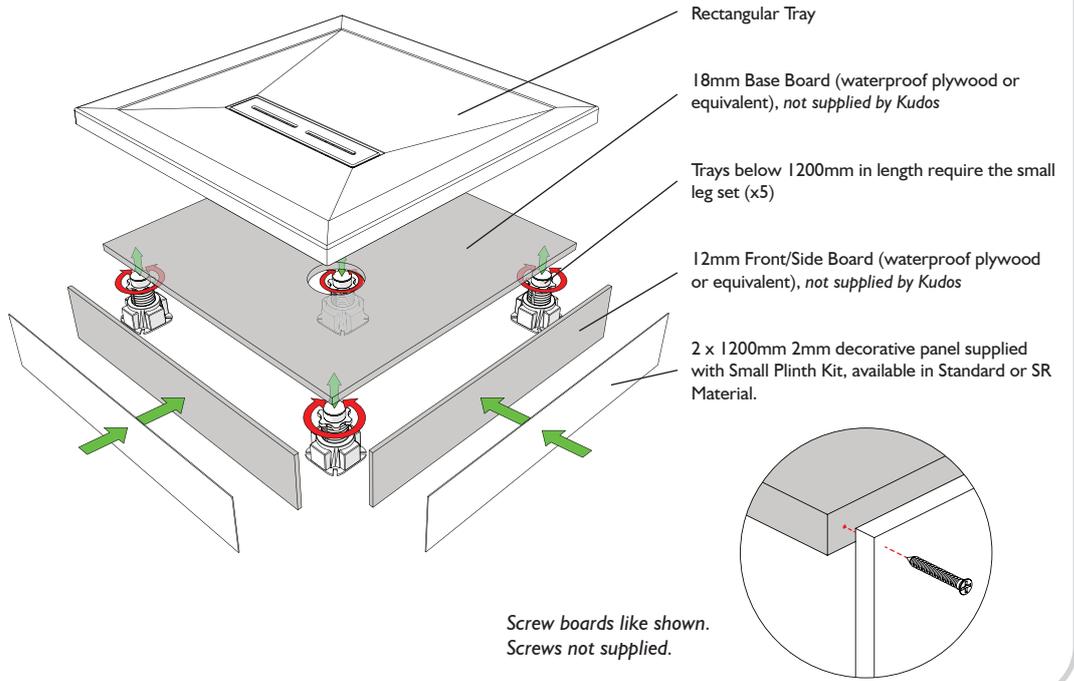


## Optional Support Facia Installation

1a. Optionally, before fitting the facias you can add either L-shaped brackets or blocks so that the fascia can't change position.


L-shaped Brackets and Blocks are NOT supplied by Kudos.

Use diagram as a guide for the blocks. Diagram relates to a 900 x 900 tray. May require more for the larger tray sizes.

1b. Next Page

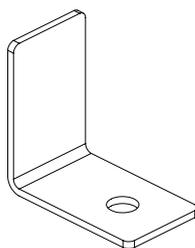


L-shaped Bracket

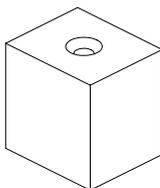

Block


**NOT SUPPLIED BY KUDOS**

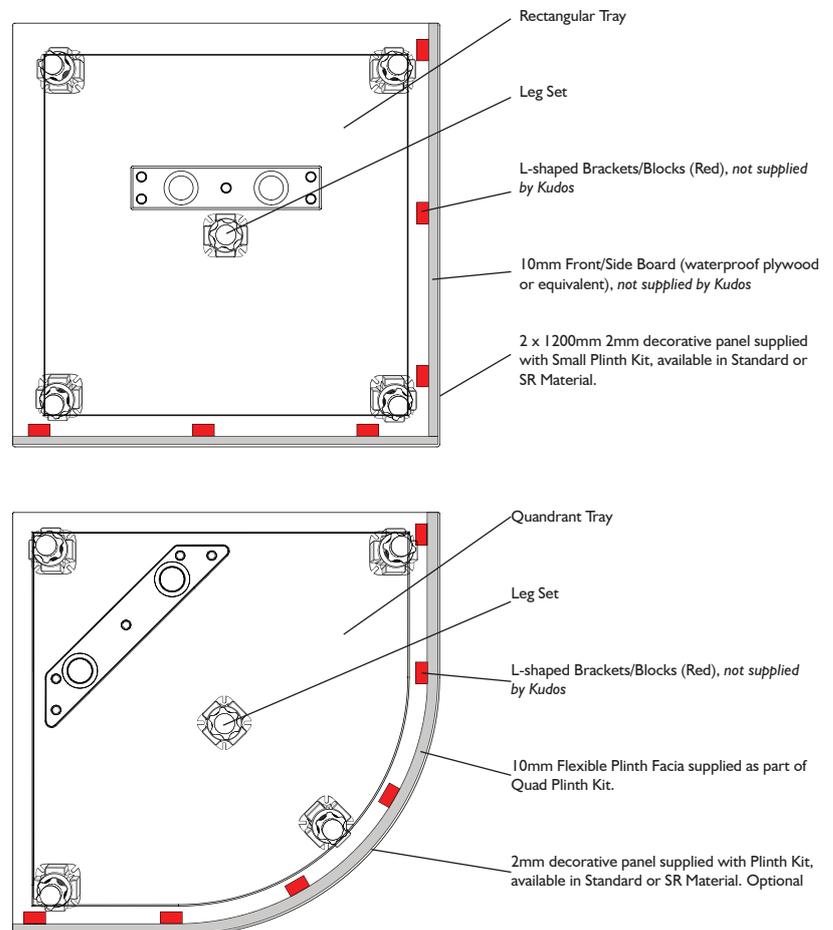

## Optional Support Facia Installation

1 b. Optionally, if you have spare ply left over, this can easily be used so that the facia can't change position.

Use diagram as a guide for the adding ply. Diagram relates to a 900 x 900 tray. May require more for the larger tray sizes.

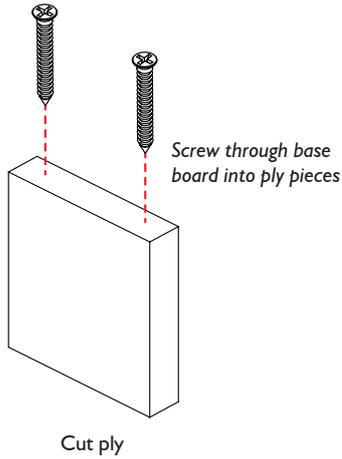

**NOT SUPPLIED BY KUDOS**

