

QUADRANT TRAY PLINTH KIT INSTALLATION INSTRUCTIONS

Please read these instructions throughout before installing as incorrect fitting will invalidate the guarantee. If you are unsure about these instructions please contact Kudos Shower Products 01539 564040.

THESE INSTRUCTIONS ARE TO BE LEFT WITH THE CONSUMER

HEALTH & SAFETY WARNING

DUE TO THE WEIGHT & SIZE OF THE TRAY(s) A MINIMUM OF TWO PERSONS ARE REQUIRED TO MOVE AND INSTALL

Important

Check appearance of all product - any defects must be reported to your retailer before assembly/installation. Claims for imperfections will only be accepted prior to assembly/installation.

Any claims made under the terms of the Lifetime Guarantee must be reported to your retailer within 21 days of the fault occurring.

Quadrant Flexible Plinth Product Descriptions & Codes

Product Code: 162136

Pre-machined cut flexible Plinth Facia for Quadrant Trays



Product Code: 161491

Decorative Acrylic Facia Cover 1900mm High Gloss Finish



Product Code: 164758

Decorative Acrylic Facia Cover 1900mm Matt SR Finish


Quadrant Tray - Base Board

I. Cut out a Base Board (not supplied) with is a minimum of I8mm thick and needs to be a moisture resistant material.

Width value of 'W' - 14mm and depth value of 'X' - 14mm.


Add a radius of 536mm so that its concentric with the tray radius. The radius needs to start from straight values 'Y' & 'Z' from the tray.


2. Cut a Hole (max 140mm) corresponding to the waste position on the tray. If fitting a connect2 tray cut only one hole to correspond to the waste hole to be used.

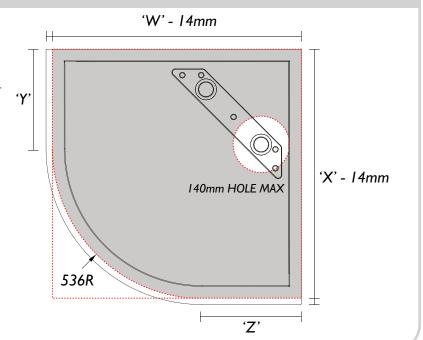

Cut Flexible Plinth Facia to suit Quadrant Size

- I. Aquire the Pre-machined cut flexible Plinth Facia for Quadrant Trays.
- 2. Cut to suit the Quadrant Tray size you have.



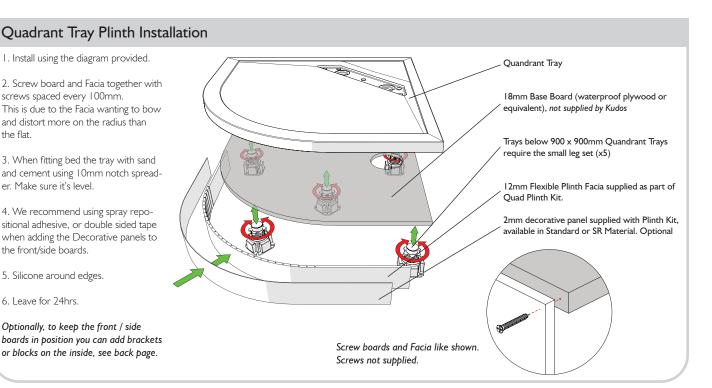

Optional Support Facia Installation


Ia. Optionally, before fitting the facias you can add either I-shaped brackets or blocks so that the facia can't change postition.

L-shaped Brackets and Blocks are NOT supplied by Kudos.

Use diagram as a guide for the blocks. Diagram relates to a 900 x 900 tray. May require more for the larger tray sizes.

1b. Next Page

the flat.

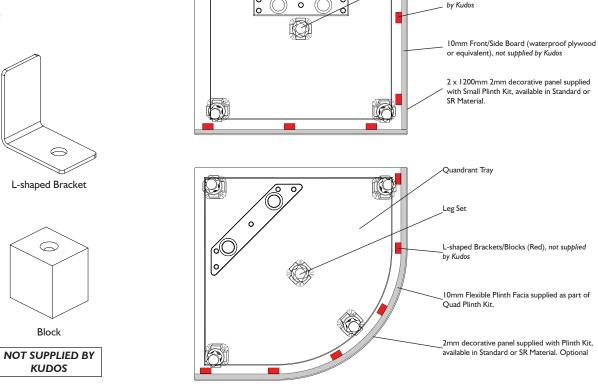

Issue 01 AUG.21 2

Rectangular Tray


L-shaped Brackets/Blocks (Red), not supplied


Leg Set



Ib. Optionally, if you have spare ply left over, this can easily be used so that the facia can't change postition.

Use diagram as a guide for the adding ply. Diagram relates to a 900×900 tray. May require more for the larger tray sizes.

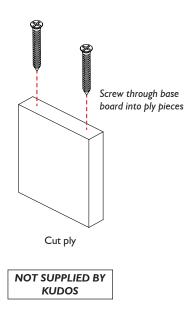

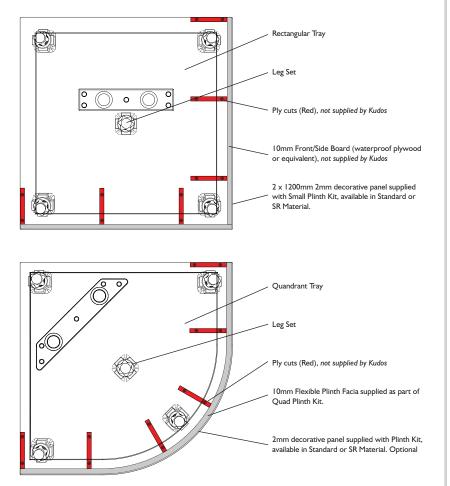

3 Issue 01 AUG.21